

MAINTENANCE SCHEDULE

The motorcycle should be maintained within the specified time, and for safety, it should only be serviced by the Kove repair shop.

The symbols in the table have the following meanings:

I: Inspection, cleaning, adjustment    R: Replacement    A: Adjustment    L: Lubrication

Items	Times	Maintenance Schedule					
		1000~1500 km	every 5000 km	every 10000 km	every 20000 km	every 1 year	every 2 year
※	Throttle operational system	I	I	I	I	I	I
	Air filter	I/R	I/R	I/R	R	R	R
※※	Valve clearance				I		
※	Engine oil	R	R	R	R	R	R
※	Oil filter	R	R	R	R	R	R
※	Timing chain tension	I	I	I	I	I	I
	Driving chain tension		I & L	I & L	I & L	I & L	I & L
	Brake shoes wear	I	I	I	I	I	I
※	Brake system	I	I	I	I	I	I
※	Clutch	I	I	I	I	I	I
※	Fastener	I	I	I	I	I	I
※	Directional bearing	I	I	I	I	I	I
※※	Rear spoke bearing	I	I	I	I	I	I
※	Front and rear wheel bearing	I	I	I	I	I	I
	Battery			I	I	I	I
※	Fuel pipe and filter			R	R	R	R
※	Spark plug			I	I	I	I
※	Swing arm bearing				I & L	I & L	I & L
※	Brake fluid					R	R
	Coolant	I	I	I	I	I	R

\*: The item is repaired by the personnel of the special repair store of Kove repair shop. If the user has special tools, repair parts and repair ability, user can also repair by himself, and the repair knowledge can refer to this instruction manual.

\*\* : To ensure safety, this project can only be repaired by the personnel of the special repair store of Kove.

**attention (ride in dirty area):**

1. Air filter clean everyday.
2. Clean the suspension every day.